



ELECTRIC FIREPLACE

www.amantii.com

INSTALLATION AND OPERATION INSTRUCTIONS FOR


TRV-45 BESPOKE BS2100045-1/EU4

TRV-55 BESPOKE BS2100055-1/EU4

TRV-65 BESPOKE BS2100065-1/EU4

TRV-75 BESPOKE BS2100075-1/EU4

TRV-85 BESPOKE BS2100085-1/EU4

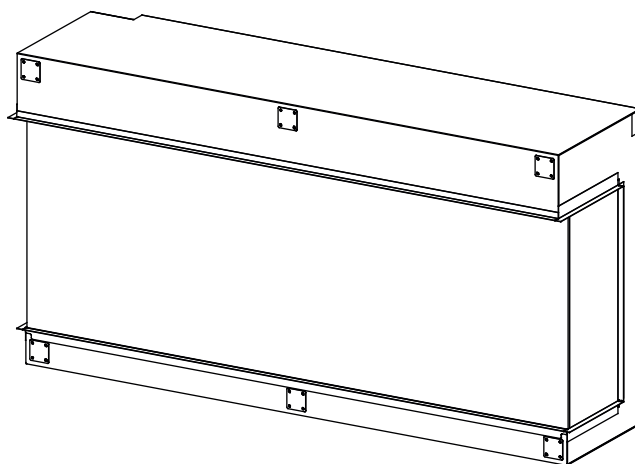

SAFETY INFORMATION



WARNING

if the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other.



INSTALLER: LEAVE THIS MANUAL WITH THE APPLIANCE.

CONSUMER: RETAIN THIS MANUAL FOR FUTURE REFERENCE.



WARNING: This product can expose you to chemicals including lead in the wiring, which is [are] known to the State of California to cause birth defects of other reproductive harm. For more information visit: www.p65warnings.ca.gov

TABLE OF CONTENTS

Please read and carefully follow all of the instruction found in this manual. The instructions included here will assure that you have many years of dependable and enjoyable service from your Amantii Electric Fireplace.

IMPORTANT INSTRUCTIONS - - - - -	03
CAUTIONS - - - - -	04
PLUG INSTALLATION - - - - -	05
UNPACKING AND TESTING APPLIANCE - - - - -	05
LOCATING THE FIREPLACE - - - - -	05
PRODUCT SPECIFICATION - - - - -	06
HARDWIRE INSTALLATION - - - - -	07
INSTALLATION - - - - -	08
MODULAR INSTALLATION - - - - -	11
MEDIA INSTALLATION - - - - -	13
MANUAL OPERATION - - - - -	14
REMOTE CONTROL OPERATION - - - - -	15
TROUBLE SHOOTING - - - - -	18
MAINTENANCE INSTRUCTIONS - - - - -	18
ENVIRONMENT - - - - -	18
REPLACEMENT PARTS - - - - -	19
EXPLODED VIEW - - - - -	20
WIRING DIAGRAM - - - - -	21
ELECTRIC FIREPLACE WARRANTY - - - - -	22

IMPORTANT INSTRUCTIONS

Please read the following instructions carefully before using the appliance.

Caution - Fire, electric shock, physical injury and material damage hazards:

To use the appliance, always follow the instructions for assembly, use and maintenance as well as usage cautions:

1. Carefully read and retain these instructions.
2. Before connecting the appliance, be sure that the mains voltage available matches that specified on the rating plate.
3. Do not use the appliance for other than its intended use. For domestic indoor use only.
4. There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
5. The heater is hot when in use. To avoid burns, do not let bare skin touch any hot surface.
6. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1m away from the heater.
7. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
8. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
9. Do not use the heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
10. Keep the heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.
11. Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
12. Do not immerse the cord, plug or any part of the appliance in water or any other liquid.
13. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
14. The heater must not be located immediately below a socket-outlet.
15. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
16. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
17. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
18. WARNING: In order to avoid overheating, do not cover the heater.
19. WARNING! – DO NOT COVER THIS APPLIANCE WITH ITEMS SUCH AS CLOTHING, BLANKETS OR PLACE NEXT TO CURTAINS OR NET/BLINDS.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
21. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. If the glass is damaged, do not use the heater in order to avoid a hazard.
23. Children of less than 3 years should be kept away from unless continuously supervised.
24. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved, Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
25. CAUTION Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
26. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
27. The heater may emit a slight, harmless odour and smoke when first used. This odour and smoke is normal and it is caused by the initial heating of internal heater parts and will not occur again.
28. DO NOT plug into an extension lead/cable or plug adaptor.
29. DO NOT cut off the plug and hardwire directly into the mains or via a fused fixed spur.
30. For details about installing the fireplace, please refer to "Installation" section.

CAUTIONS

Do's	Always install the heater in accordance with this guide. If in doubt obtain expert advice.
	Always make sure the electrical socket is accessible and located adjacent to, but not above the heater.
	Always disconnect the heater from the electrical supply before moving it, or carrying out cleaning, maintenance.
	Always make sure the heater is firmly secured to prevent it from being tipped over.
	Always use a fireguard when young children and infirm persons can come into contact with the heater.
Don'ts	Never leave children unsupervised in a room where the heater is ON and unguarded.
	Never obstruct or cover the fan outlet or force items into heater openings.
	Never use aerosols or steam cleaners on or around the heater.
	Never route the main supply cable under carpet etc.
	Never install the heater close to curtains or combustible materials.
	Never use the heater to dry clothes etc.
	Never sit or stand on the heater.


PLUG INSTALLATION

Your power cord will come separate from the unit, please locate it when unpacking your fireplace. The plug contained inside the box is predetermined at the factory and according to orders placed by authorized dealers.

Available are UK, European, Swiss & Australian plugs. Should you require any of these options please contact your dealer for purchase. You will be required to give them the correct part number as listed below.




UK plug
10103060E

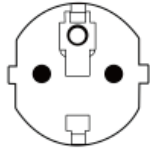

European plug
10103030E



Swiss plug
10103109E

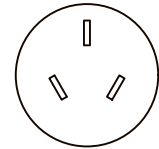

Australian plug
10103087F

Hold the male plug and insert it into the female receptacle. The receptacle is located on the left side of the fireplace. Please make sure the plugs are firmly connected.

UNPACKING AND TESTING APPLIANCE

Carefully remove the appliance from the box.

Prior to installing the appliance, test to make sure the appliance operates properly by plugging the power supply cord into a 240 Volt grounded outlet.

Test all aspects of its operation (manual switches, remote and heater) to make sure all components are operating correctly.

NOTE: There may be trace of odor during the first few minutes of initial use. This is harmless, normal and will never occur again.


LOCATING THE FIREPLACE

Plan where to locate and frame the fireplace. This will save time and money later when you install the fireplace. Before installation consider the following:

1. Where the fireplace is located must allow for wall and ceiling clearances.
2. Consider a location where the fireplace screen will not be exposed to direct sunlight from windows or doors.
3. A 15A / (10A for AUS), 240 Volt, 50-60 Hz branch circuit with proper ground must be available at the location. Preferably a dedicated branch circuit should be provided to avoid circuit breakers to trip or fuses to blow.

PRODUCT SPECIFICATION

Product model	BS2100045-1/EU4 TRV-45 BESPOKE	BS2100055-1/EU4 TRV-55 BESPOKE	BS2100065-1/EU4 TRV-65 BESPOKE	BS2100075-1/EU4 TRV-75 BESPOKE	BS2100085-1/EU4 TRV-85 BESPOKE
Voltage	220-240V AC 50Hz				
Watts	1700W-2000W				
Appliance size (W x H x D)	46 1/8" x 29 3/8" x 15" 117.2 x 74.6 x 38.2 cm	56 1/8" x 29 3/8" x 15" 142.7 x 74.6 x 38.2 cm	66 1/8" x 29 3/8" x 15" 168.1 x 74.6 x 38.2 cm	76 1/8" x 29 3/8" x 15" 193.5 x 74.6 x 38.2 cm	86 1/8" x 29 3/8" x 15" 218.9 x 74.6 x 38.2 cm
Glass Viewing (W1 x H1)	45" x 20" 114.3 x 50.9 cm	55" x 20" 139.7 x 50.9 cm	65" x 20" 165.1 x 50.9 cm	75" x 20" 190.5 x 50.9 cm	85" x 20" 215.9 x 50.9 cm
Cord Length	L=70.9" L=180 cm				

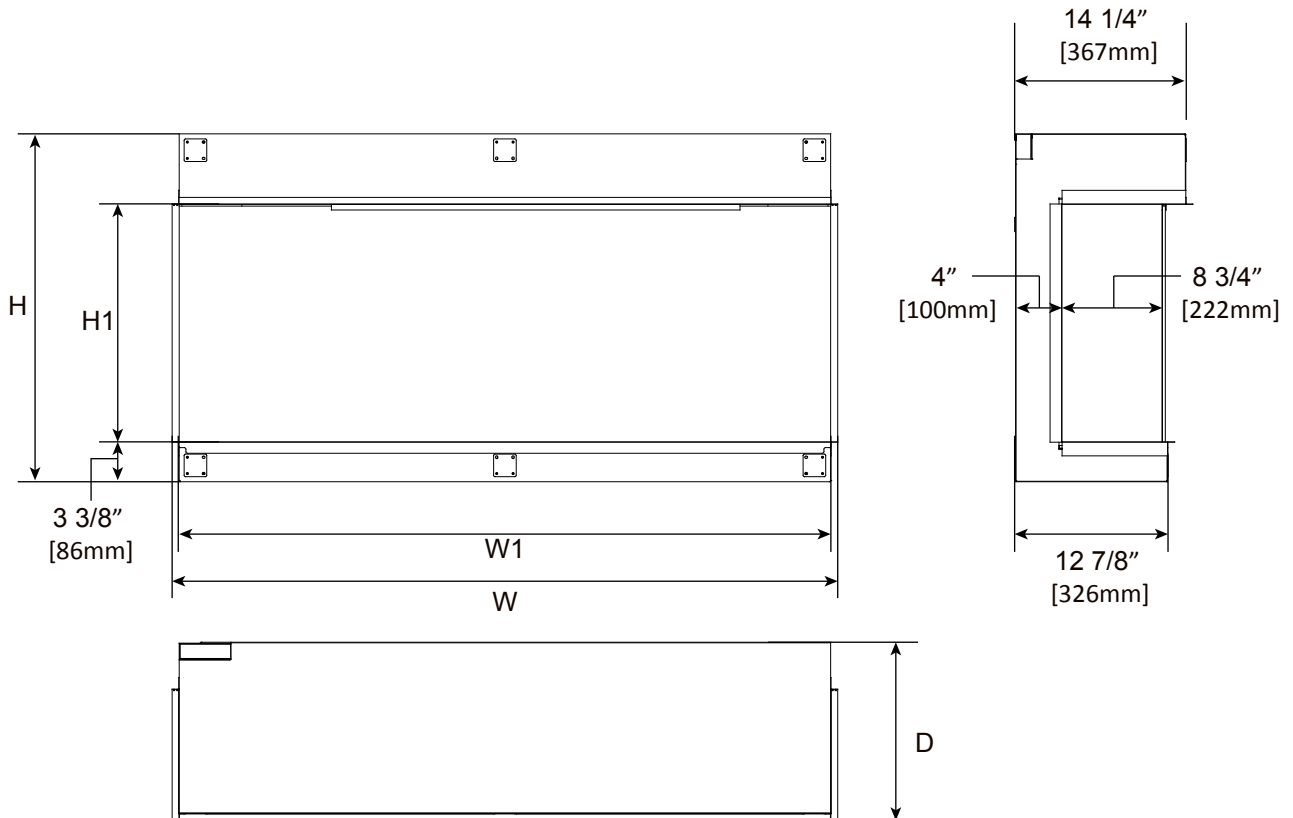

HARDWIRE INSTALLATION


Turn off the appliance completely and let cool before servicing. Only a qualified service person should service and repair this electric appliance.

If it is necessary to hardwire this appliance, a qualified electrician must remove the cord connection, and wire the appliance directly to the house hold wiring.


This appliance must be electrically connected and grounded in accordance with local codes, if hardwired.

1. Test the unit before removing the cord.

Remove the cover plate from the back top right corner of the appliance by removing the four screws, as shown below. Unscrew and remove power cord.

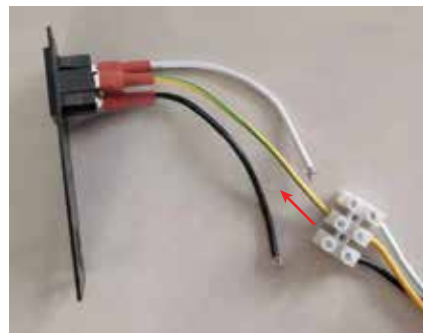

2. Attach the wiring to the junction block. Please make sure the live wire goes into the "L", the neutral wire into "N" and the ground wire into "G".

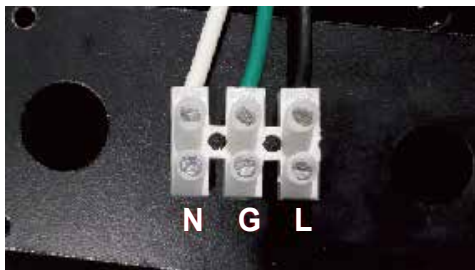

3. Return the cover plate to the back top right corner and screw the four screws back in to fasten the plate.




INSTALLATION

The TRV BESPOKE models are designed to be built-in and allow for the finishing material (drywall, stone, tile, etc) to be built right down to the glass edge.


NOTE: Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this fireplace down to the finishing lip and not to the glass.

The wall opening size of the fireplace:

	W	D	H
TRV-45 BESPOKE	45 1/4" 114.8 cm	13 1/4" 33.6 cm	29 5/8" 75.2 cm
TRV-55 BESPOKE	55 1/4" 140.2 cm	13 1/4" 33.6 cm	29 5/8" 75.2 cm
TRV-65 BESPOKE	65 1/4" 165.6 cm	13 1/4" 33.6 cm	29 5/8" 75.2 cm
TRV-75 BESPOKE	75 1/4" 191 cm	13 1/4" 33.6 cm	29 5/8" 75.2 cm
TRV-85 BESPOKE	85 1/4" 216.5 cm	13 1/4" 33.6 cm	29 5/8" 75.2 cm

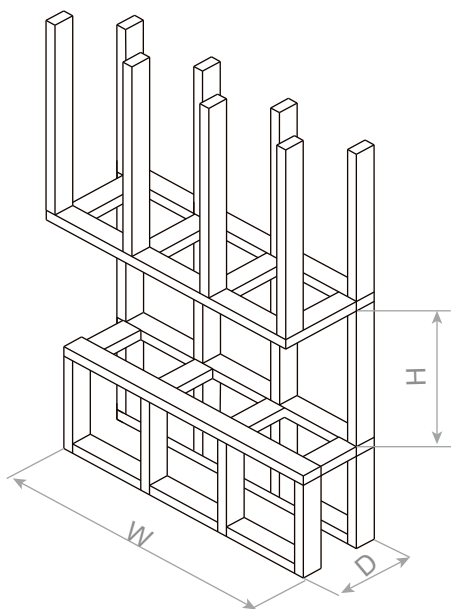


1. Product is fixed with fending bars and panels on the left and right side.

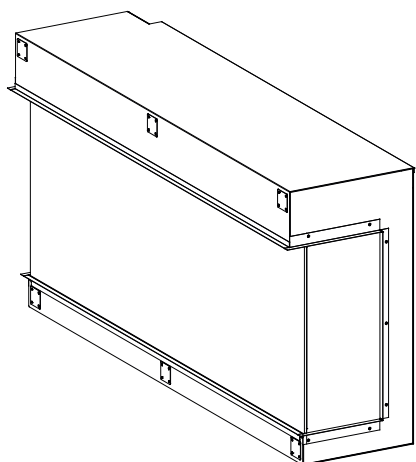


2. To view the flame from different angles, you need to remove panels from different sides.


(1). Remove both sides of the fending panels if you want to view the flame from three angles.

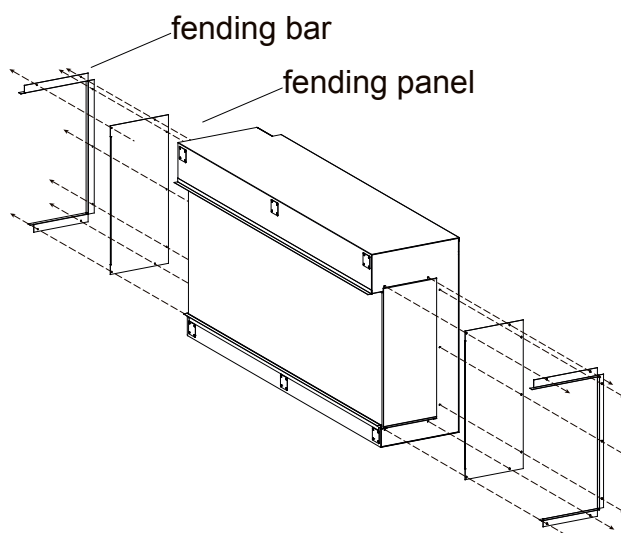


(2). Remove the fending panel on the left side if you want to view the flame from front and left side.

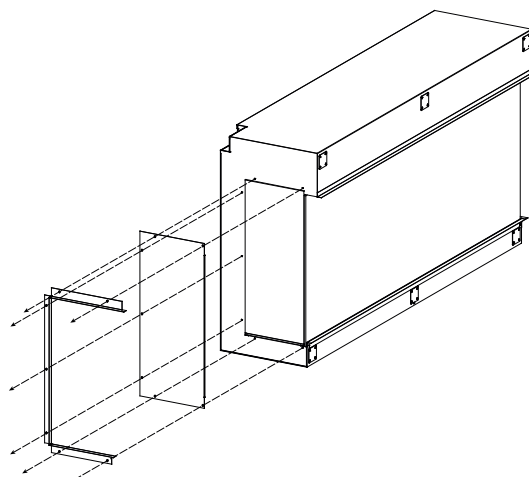


(3). Remove the fending panel on the right side if you want to view the flame from front and right side.

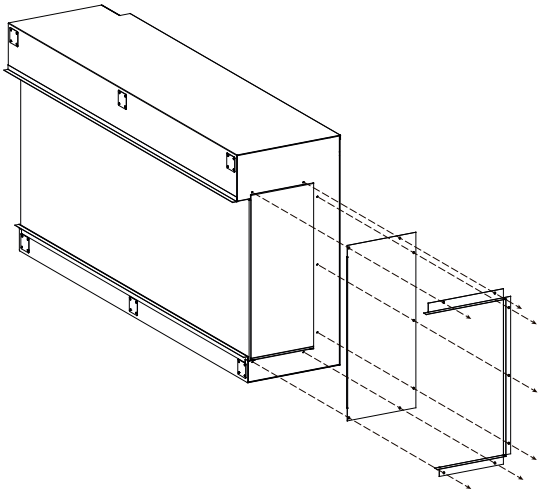


3. Screw back the fending bar after the panel is removed.

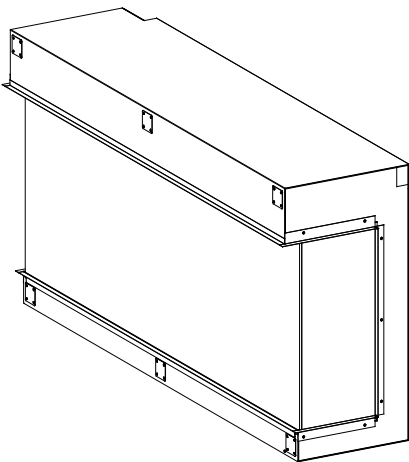


4. Remove the framing plates from the fireplace and save for step 6.

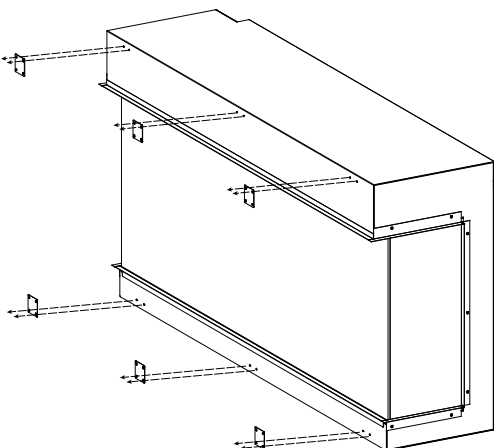

5. Make an opening for the fireplace according to requested measurement.

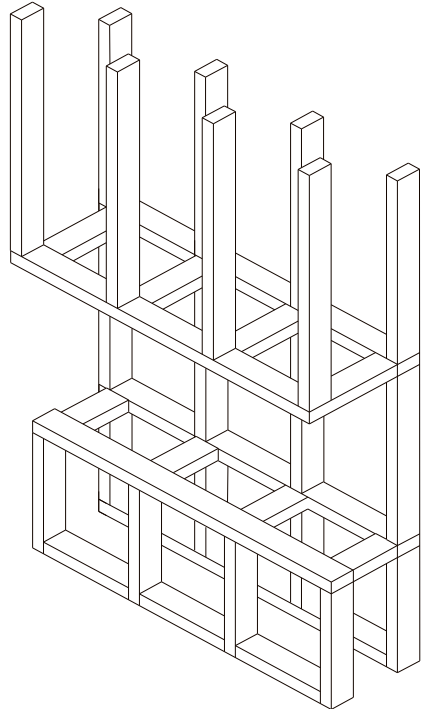


6. Insert the fireplace into the wall opening. Drive the mounting screws into the frame plates on the unit and the wall studs. To fix the bottom of the fireplace and the wall studs with the framing plates that you've removed from the fireplace at STEP 4. Plug in and check if the fireplace works.

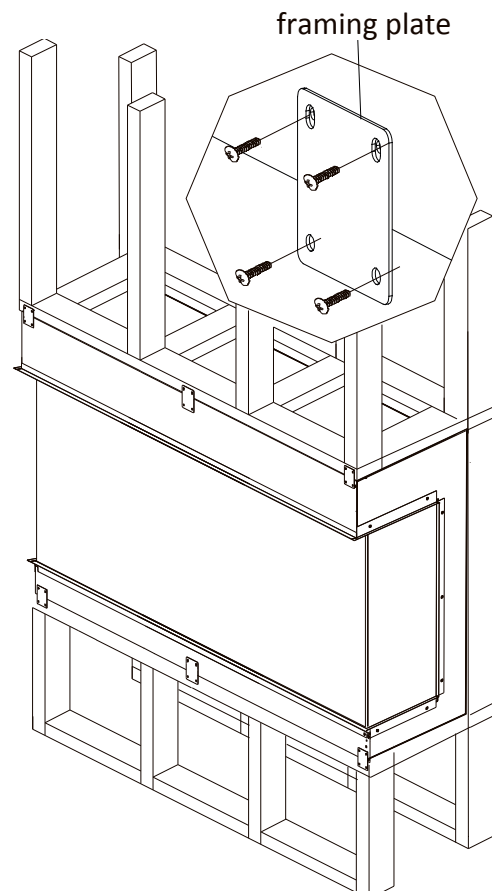


7. After checking that the fireplace operates properly, cover the glass panels with protective plastic bag and install plywood or drywall.



Three Sided Installation

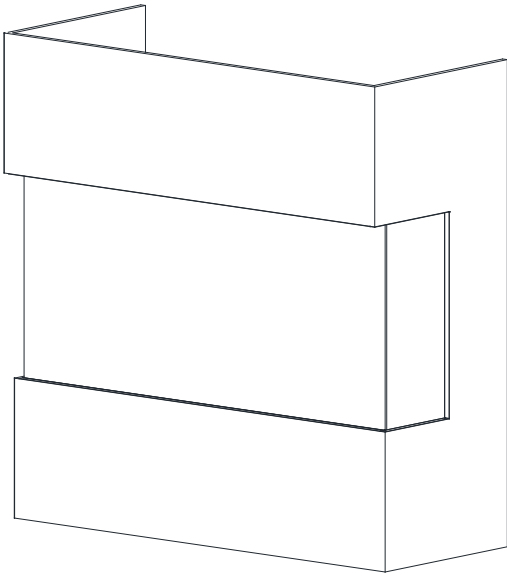

Right Side Open Installation

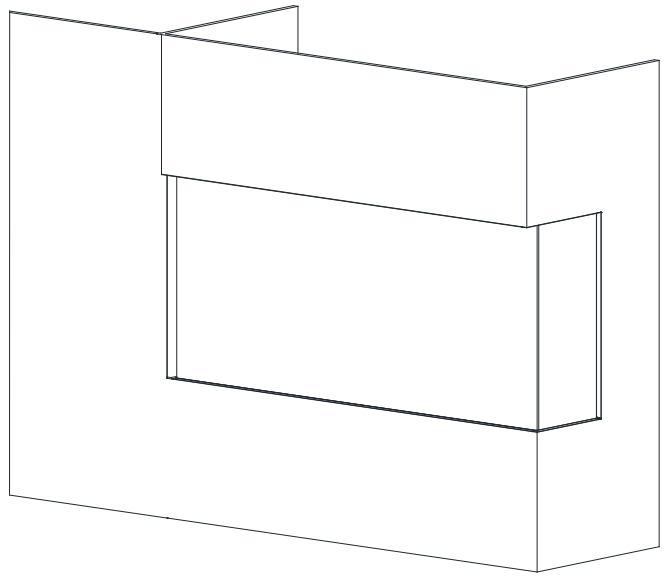


Left Side Open Installation

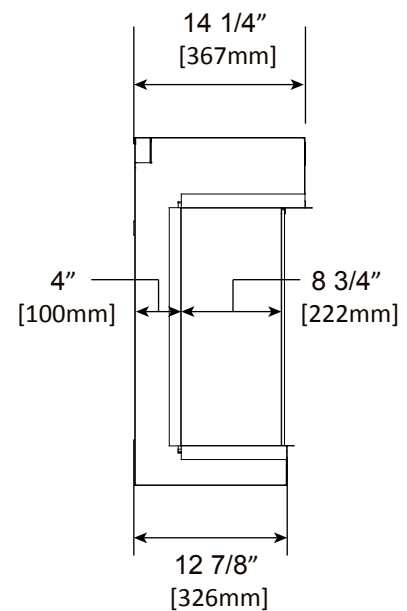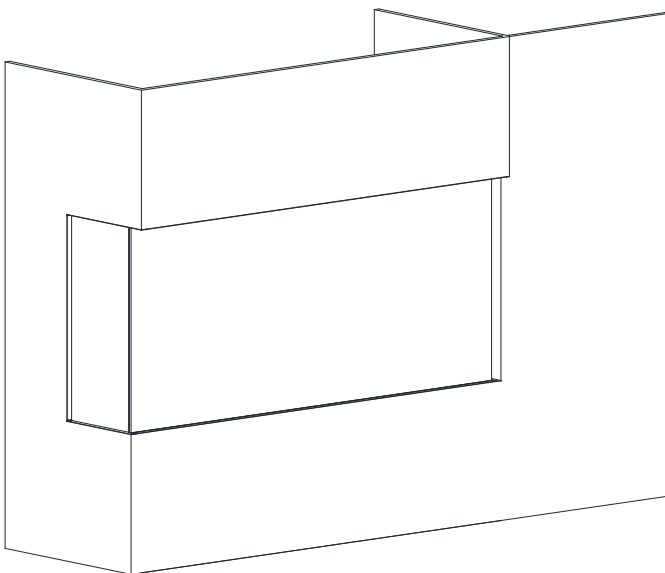


MODULAR INSTALLATION


1. Unscrew all 7 screws on the right side that hold the fending bar and panel, and then take off the fending bar and panel.

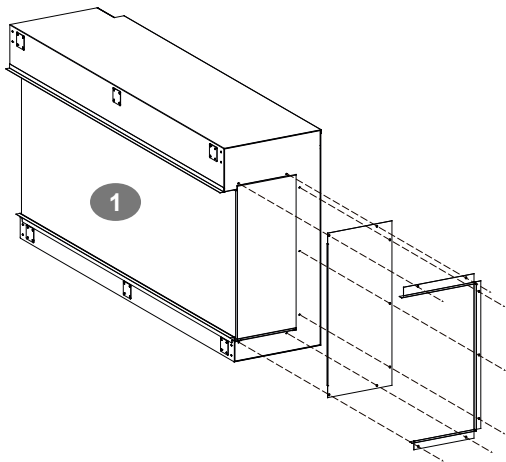


2. Unscrew 3 screws (The quantity varies depending on the size of the unit) and remove the front glass bracket which are fending the front glass.

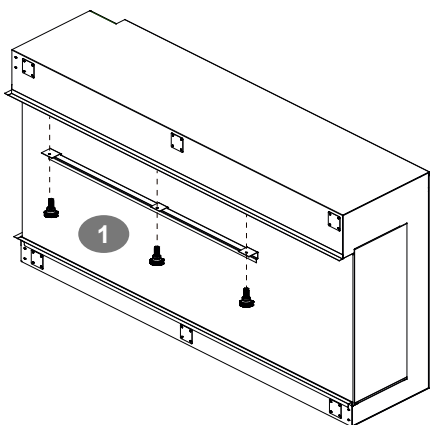


3. Take off the front glass and put it in safe place.

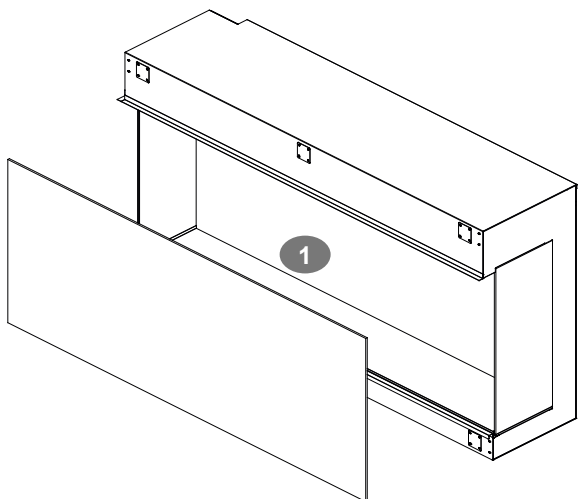


4. Unscrew the 2 screws and remove the brackets which are fending the right side glass.

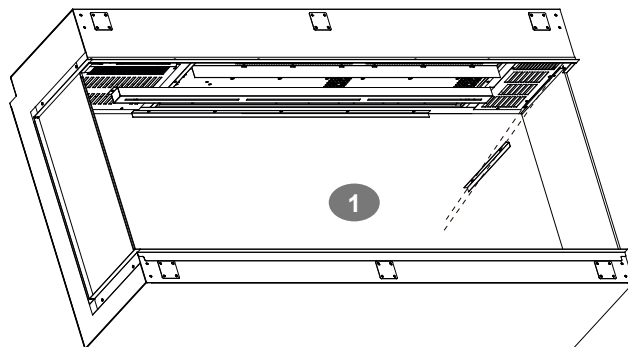


5. Remove the right side glass and take off the bracket.

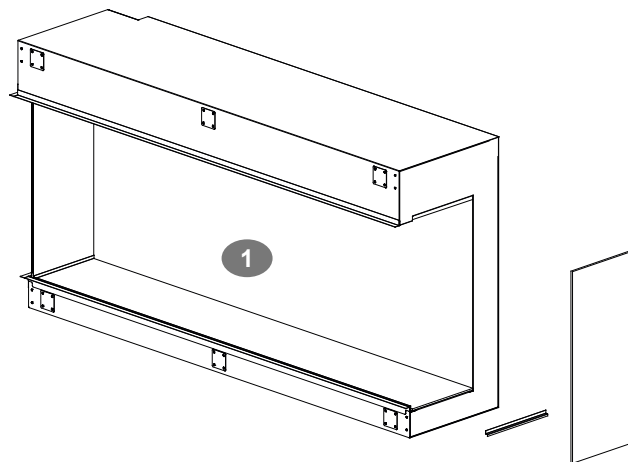

6. Remove the front glass, left side fending bar, fending panel, left glass and brackets from the other one in the same way.

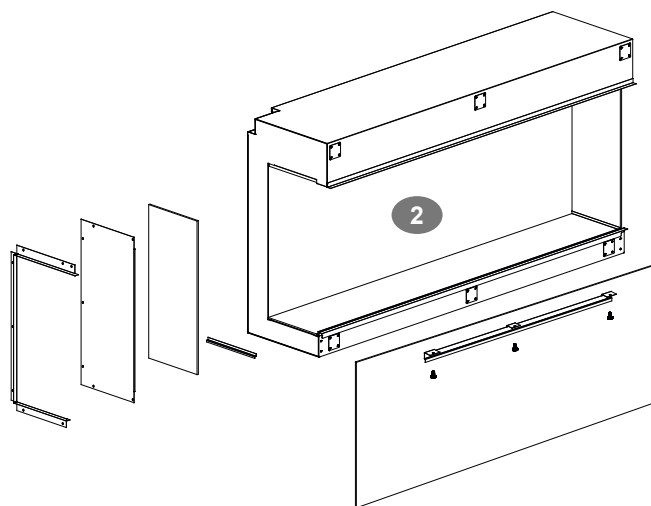


7. Align fireplace 1 and fireplace 2 and place the right side of fireplace 1 close to the left side of fireplace 2.

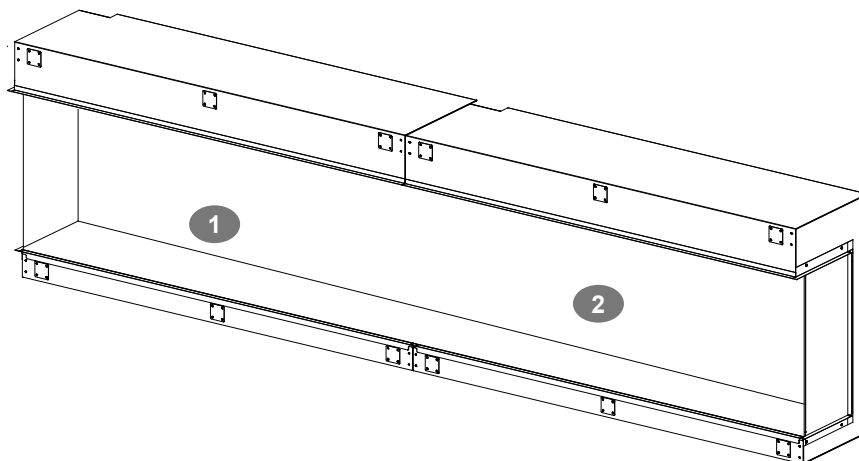


8. Unscrew the 8 screws at the joint, then remove the 2 framing brackets from the fireplace 1 and fix them as shown in the image.

NOTE: After removing the framing brackets on the fireplace 1, screw back in the screws that were taken out.

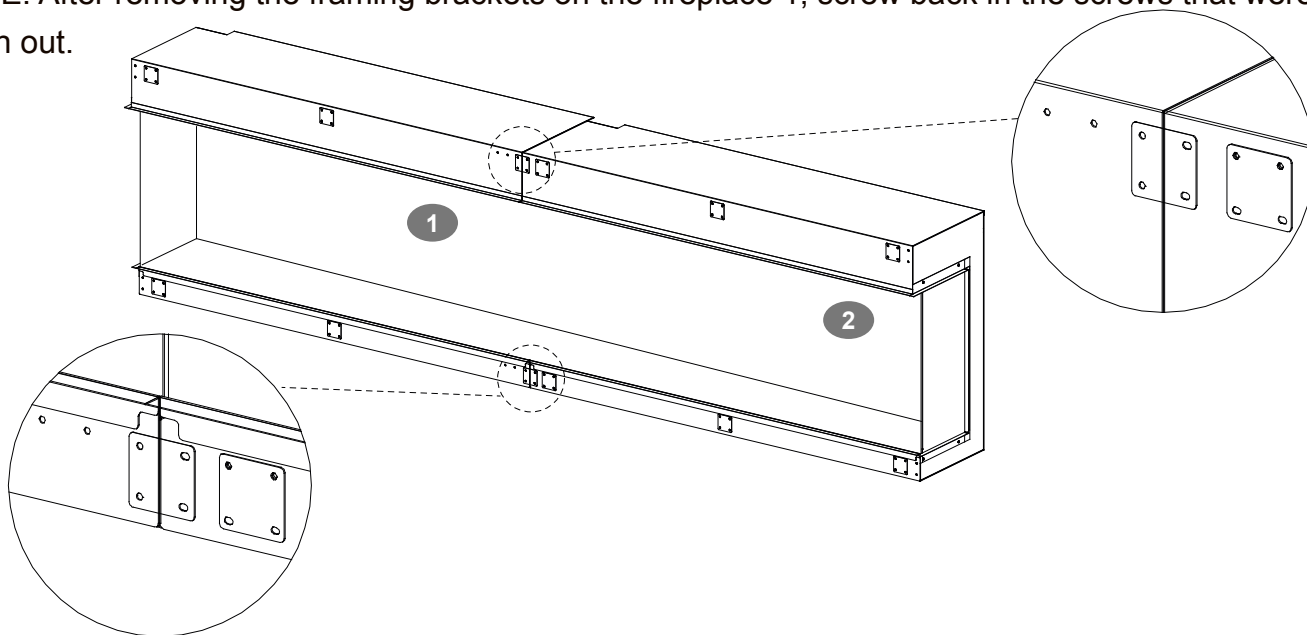


9. Put back the front glass to the fireplaces and secure them with screws and front glass brackets.

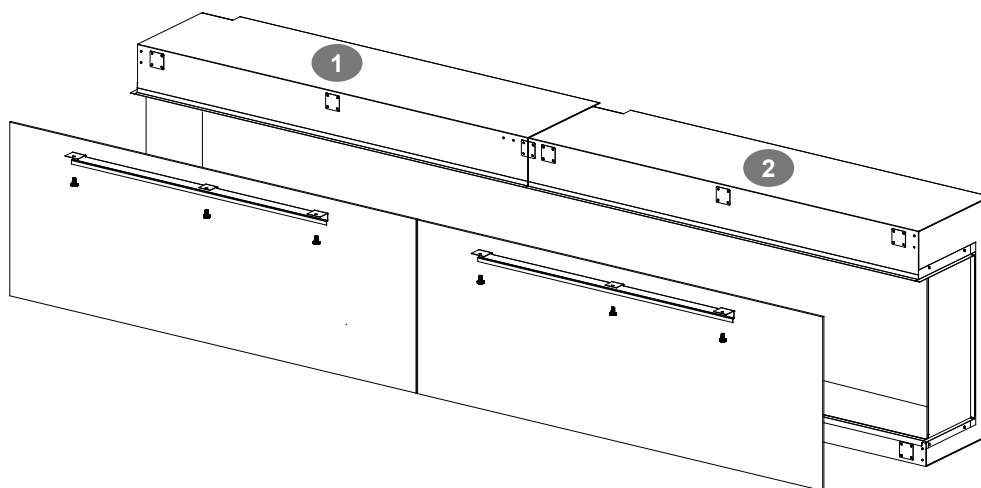


MEDIA INSTALLATION

1. Unscrew 3 screws (The quantity varies depending on the size of the unit) and remove the bracket which are fending the front glass panel.

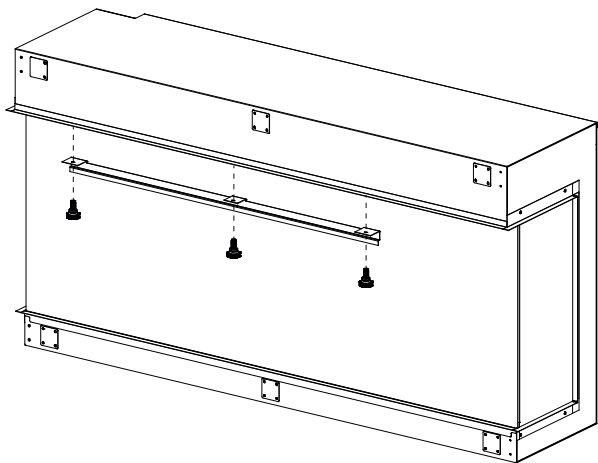


2. Take off the front glass panel and put it in safe place.

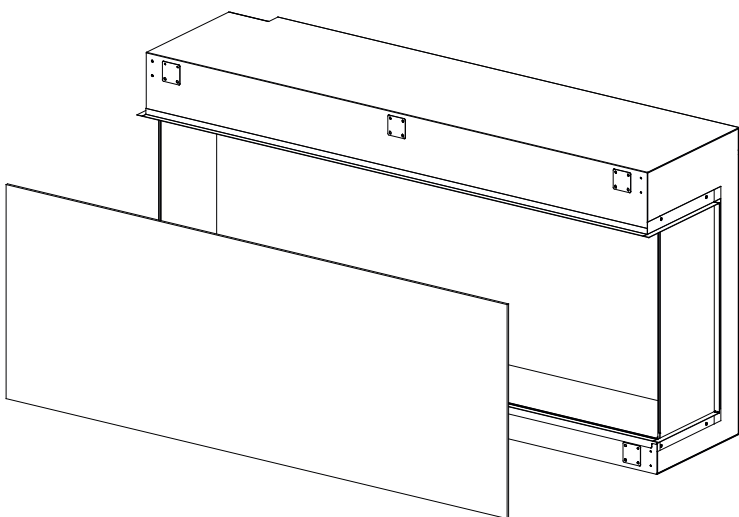

3. Installing the fire glass media. Pour the fire glass media into the tray as shown below.

Feel free to use any combination of fire glass media that you find most appealing.

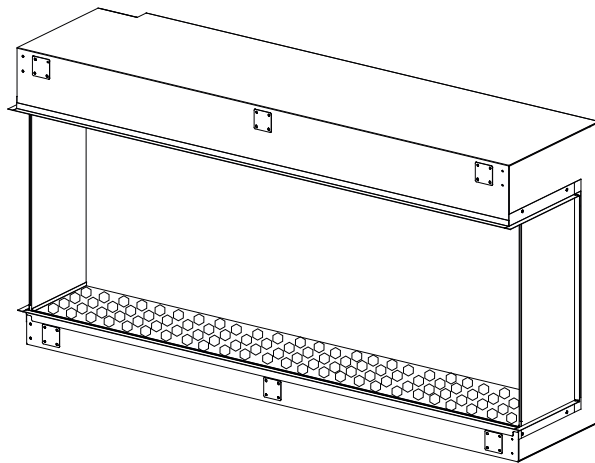


4. Put back the front glass and screw back the bracket.


MANUAL OPERATION


The fireplace operates either by the touch panel located on the left front top side of the fireplace or by supplied remote control.

Ensure that the ON / OFF Power Switch on the fireplace is in the ON position.

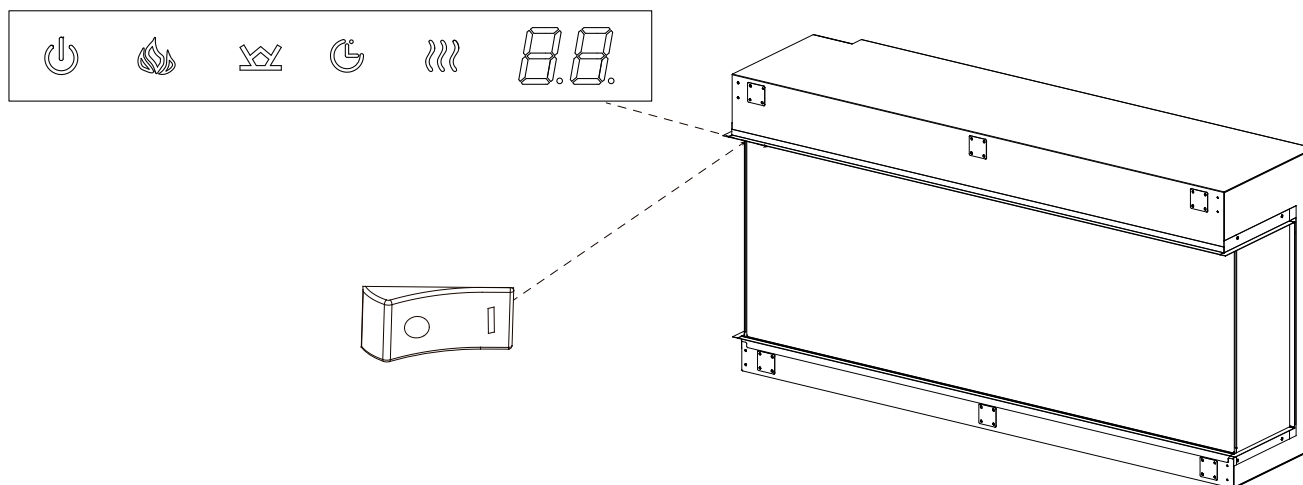



Touch the control panel once to “wakes up” the controls. This will cause the controls to light up. At this time, you can press the power button to turn on fireplace

1. Press “  ” to turn on and off the fireplace.


2. Press “  ” to adjust the flame brightness. There are 6 brightness levels (L6-L1) and an off(OFF) position. Each time the flame button is pressed, the brightness of the flame decrease.

 
Press the flame button more than 5 seconds, the timer indicator light on and will rapidly blinks, at this time, you can use the TuyaSmart APP to connect to the fireplace.

3. Press “  ” to adjust the ember bed brightness. There are 7 brightness levels (d8-d2), dynamic condition(d1) ,and the OFF(OFF) setting you can cycle through. Each time the ember bed button is pressed, the brightness of the ember bed decrease.

4. Press “  ” for the first time to display the current timing. If the timing in off position, the second press will show 30. Multiple times to set operating duration to OF, 30 min, 1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h.

Press and hold the “  ” for 5 seconds to turn on the sound.

5. Press “  ” for the first time to display the current setting temperature , when the digital display stop blinks, press the button again to clear the current temperature. If the heater in off position, the second press will show 22℃ (72 ℉). Multiple times to set ambient temperatures at 22℃ (72 ℉), 23℃ (74 ℉), 24℃ (76 ℉), 25℃ (78 ℉), 26℃ (80 ℉), 27℃ (82 ℉), 28℃ (83 ℉), 15℃ (59 ℉), 16℃ (60 ℉), 17℃ (62 ℉), 18℃ (64 ℉), 19℃ (66 ℉), 20℃ (68 ℉), 21℃ (70 ℉).

Temperature unit convert function: When the heater is on, press and hold the “  ” Button for 5 seconds, current temperature unit display will convert to another temperature unit.












NOTE: The heater is turned on by switching on the fan first, then after 5 seconds the heating coil. The heater is turned off by switching off the heating coil first, then after 30 seconds the fan.

REMOTE CONTROL OPERATION

For the remote to function make sure the fireplace is plugged in and the ON / OFF Power Switch on the fireplace is in the ON position and the remote has batteries.

Important: When operating the remote make sure you point the remote to the center of the fireplace. Each time you press the button, there will be a beep tone emitted.



Setting the current time of the remote control

You must press the  key to open the remote control and press the  key to enter the setting current time state. When one of the “Sun” “Mon” “Tue” “Wed” “Thu” “Fri” “Sat” date is flashing, you can press the  or  key to select the current day of the week, and press the  key to confirm and enter hour setting. When the digital tube of time hour flashes, press the  or  key to set the current time and press the  key to confirm and enter minute setting. When the digital tube of time minute flashes, press the  or  key to set the current time and press the  key to confirm.



This Power Button turns the fireplace on and off. It has a memory function, press the power button once to turn power on. Pressing the power button again will turn the power off.



The Timer Button has adjustable setting at range from 30 minutes to 8 hours. As shown the following: 0:30- 1:00- 1:30- 2:00- 2:30- 3:00- 3:30- 4:00- 4:30- 5:00- 5:30- 6:00- 6:30- 7:00- 7:30- 8:00. Once you have set the timer, The  icon will be displayed on the LCD screen of the remote control. Press this button again, cancel the timing setting, and the  icon disappears.





When the timer is up, it will close all the functions and enter standby mode. In this mode, you should touch the power icon to restart the appliance.



Each time the Heater Button is pressed, the power of the heater will change. As shown the following: H1- H2- AUTO(22°C)- OFF(no display).

H1 means the fireplace on Low Heat.



H2 means the fireplace on High Heat.

AUTO means fireplace can automatically adjust to the temperature you set. When in AUTO, you can set the desired temperature with  or  keys. You can switch temperature unit between Celsius and Fahrenheit with  or  keys.






Each time Speed Button is pressed, the speed of the flame will change. Three options are available: Medium- High- Low.



The Moodlight Button turns the moodlight on and off. When in on position, the display screen of the remote control shows AD 1, when the number “1” flash, you can set the color of moodlight with  or  keys. There are 10 different moodlight colors(AD1-10) and dynamic condition(AD11) to choose from.



The Ember Bed Button turns the Ember bed light on and off. When in on position, the display screen of the remote control default shows 8 8 8. You can press  or  or  keys to change the corresponding color.



Each time the Red Button is pressed the brightness of the red color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.






Each time the Green Button is pressed the brightness of the green color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.



Each time the Blue Button is pressed the brightness of the blue color decrease. There are 7 brightness levels (8-2), dynamic level(1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the ember bed color is off.



The Flame Button turns the Flame on and off. When in on position, the LCD screen of the remote control default shows 6 6 6. You can press  or  or  key to change the corresponding color.



Each time the Red Button is pressed the brightness of the red color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.



Each time the Orange Button is pressed the brightness of the orange color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.














Each time the Yellow Button is pressed the brightness of the yellow color decrease. There are 6 brightness levels (6-1) and OFF (no display) settings that can be cycled through. When no number is displayed on the remote control LCD screen then the flame color is off.




NOTE: If the flame and ember bed brightness are off before the heating function is turned on, after turning on the heat, the flame and ember bed brightness is slightly light on by default.



7 day timer function





NOTE: Ensure that the current time setting accurate, otherwise the effective time of the 7 day timer function will be different from what you set.

Press the  key once, 7 days from Monday to Sunday will display on the LCD screen of the remote control, press  key within 5 seconds to enter 7 day timer function . When “Sun” is flashing use the  or  key to select the day that you want to set, pressing the  key to confirm. Then “ON” will be displayed on the LCD screen of the remote control, at the same time, the hour on the digital clock flashes, press the  or  key to set the hour and then the minute you want the fireplace to turn on. After setting the start up time, “OFF” will be displayed on the LCD screen. Use the  or  key to set the shutdown time the same as setting the start up time. After setting the shutdown time, “AUTO” will be displayed on the LCD screen of the remote control. The digital temperature flashes, at this time you can set the desired temperature with  or  keys. The fireplace will beep to acknowledge the settings. Now, the 7 day function has been set, the fireplace will save the setting and run automatically.

When the 7 day timer is set, the icon  will be displayed on the LCD screen of the remote control. Press the  key again to cancel the 7 day timer function, the  will disappear.

NOTE: If the 7 day timing and general timing exist at the same time, the shutdown time shall be the earlier time. For example, it is now 6 am on Tuesday, turning on the heaters general timer for 4 hours, will have the shutdown time of 10 am. The previous 7 day shutdown time is 8 am on Tuesday, so today's heater shutdown time is 8 am instead of 10 am.



The Refer Button queries the 7-day timer setting. This will not turn on the timer function but will only show the previous setting. Press the  or  key to query the day of the week. Press the  or  key to query the start up and shutdown time.

Press  key once to enter the query mode, press the  key again to exit query mode.



This button turns the fire crackling sound on and off.

ENERGY SAVING FUNCTION

If the heater detects a drop in temperature caused by an open window or door whilst in heat mode it will shut off the heater followed by flashing the ember bed light. To restart the heater press the any button.

TROUBLE SHOOTING

Fault code	Fault Cause	Solution
E1	The heater overheating	Call after-sales service.
E2	NTC is defective.	Call after-sales service.
E3	The heater not working.	If the vents are dirty or clogged. Unplug the power, clean the dust and debris of the vent area. Wait for 5 minutes, plug in and turn on the heater. If the heater still don't work, please call after-sales service.

Each time the heater button is pressed in the E1 state, one beep tone will be given.

Each time the heater button is pressed in the E2 state, two beeps tone will be given.

Each time the heater button is pressed in the E3 state, three beeps tone will be given.

MAINTENANCE INSTRUCTIONS

- Always remove the plug from the socket-outlet and allow the heater to cool down before cleaning it.
- Wipe the exterior surface of the appliance occasionally with a soft damp cloth (not dripping wet) and dry the exterior surface before operating the heater.



WARNING!

Do not immerse the heater in water.


Do not use any cleaning chemicals such as detergents and abrasives.

Do not allow the interior to get wet as this could create a hazard.

- Light accumulated dust may be removed from the appliance with a soft dry cloth.
- To store away the appliance put it back in to its original packaging and store it in a clean dry place.
- In the event of malfunction do not try to repair the heater yourself as this may result in a fire hazard or electric shock.

NOTE: The blower motor and flame motor are pre-lubricated for a durable period of time and need no further lubrication or maintenance. As the dust particles will accumulate on/in the fireplace, so periodic cleaning/ vacuuming of the fireplace is recommended.

ENVIRONMENT

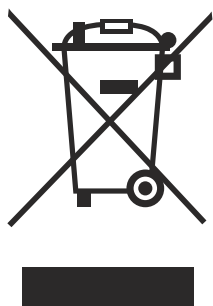


The appliance must not be disposed of with regular household waste. At the end of its service life, the appliance must be properly delivered to a collection point for the recycling of electrical and electronic equipment. By Collection and recycling of old appliances, you are making an important contribution to the conservation of our natural resources and provide for environmentally sound and healthy disposal.


REPLACEMENT PARTS

NO.	DESCRIPTION	PART NUMBER				
		BS2100045-1/EU4 (TRV-45 BESPOKE)	BS2100055-1/EU4 (TRV-55 BESPOKE)	BS2100065-1/EU4 (TRV-65 BESPOKE)	BS2100075-1/EU4 (TRV-75 BESPOKE)	BS2100085-1/EU4 (TRV-85 BESPOKE)
1	Trim	not applicable				
2	Adjustable Screws	40000174				
3	Front Glass Bracket	10002786P	10003005P	10003018P	10003012P	10003012P
4	Front Glass	60000261	60000265	60000268	60000271	60000274
5	Back Glasss	60000262	60000266	60000269	60000272	60000275
6	Tray Glass	60000264	60000267	60000270	60000273	60000276
7	Side Glass	60000263	60000263	60000263	60000263	60000263
8	Black Glass - Left	not applicable				
9	Black Glass - Right	not applicable				
10	Glass Bracket - Left	10002784P				
11	Glass Bracket - Right	10002784P				
12	Adjustable Leveling Feet	20000979				
13	Flicker Assembly for Flame	20001117	20001118	20001119	20001120	20001121
14	Flicker Assembly for Tray	20001112	20001113	20001114	20001115	20001116
15	Flame Motor	30001868				
16	Heater / Blower Assembly	30002019				
17	LED Light Set for Flames	3000205630002059 30002304-45	3000205630002304-55	3000205930002304-65	3000205930002304-75	30002059-85
18	LED Light Set for Ember Bed /Tray Lighting	3000185930001961-45	3000181230001961-55	3000181230001859 30001961-65	3000181230001961-75	3000181230001859 30001961-85
19	LED Light Set for Canopy Lighting	3000217130002305-45	30002305-55	3000217030002305-65	3000217030002305-75	3000217030002305-85
20	Temperature Sensor	30002041	30002041	300030001887	30001887	32000010
21	Remote Signal Receiver	30000703				
22	Remote Control	10105070				
23	Circuit Board	30002180				
24	AC Adapter	30001978	30002221			
25	Circuit Board for Touch Panel	200005822000092930002306		200005822000092932000006		200005822000092932000011
26	Circuit Board for Touch Pad	not applicable				
27	WiFi Card	222051				
28	Bluetooth Speaker Set (Set includes: Power Circuit Board, Speaker Circuit Board & Speaker)	300021183000211930002120				
29	Speaker Set (Set includes: Speaker Circuit Board & Speaker)	3000203230002057				
30	Power Switch	30000620				

EXPLODED VIEW

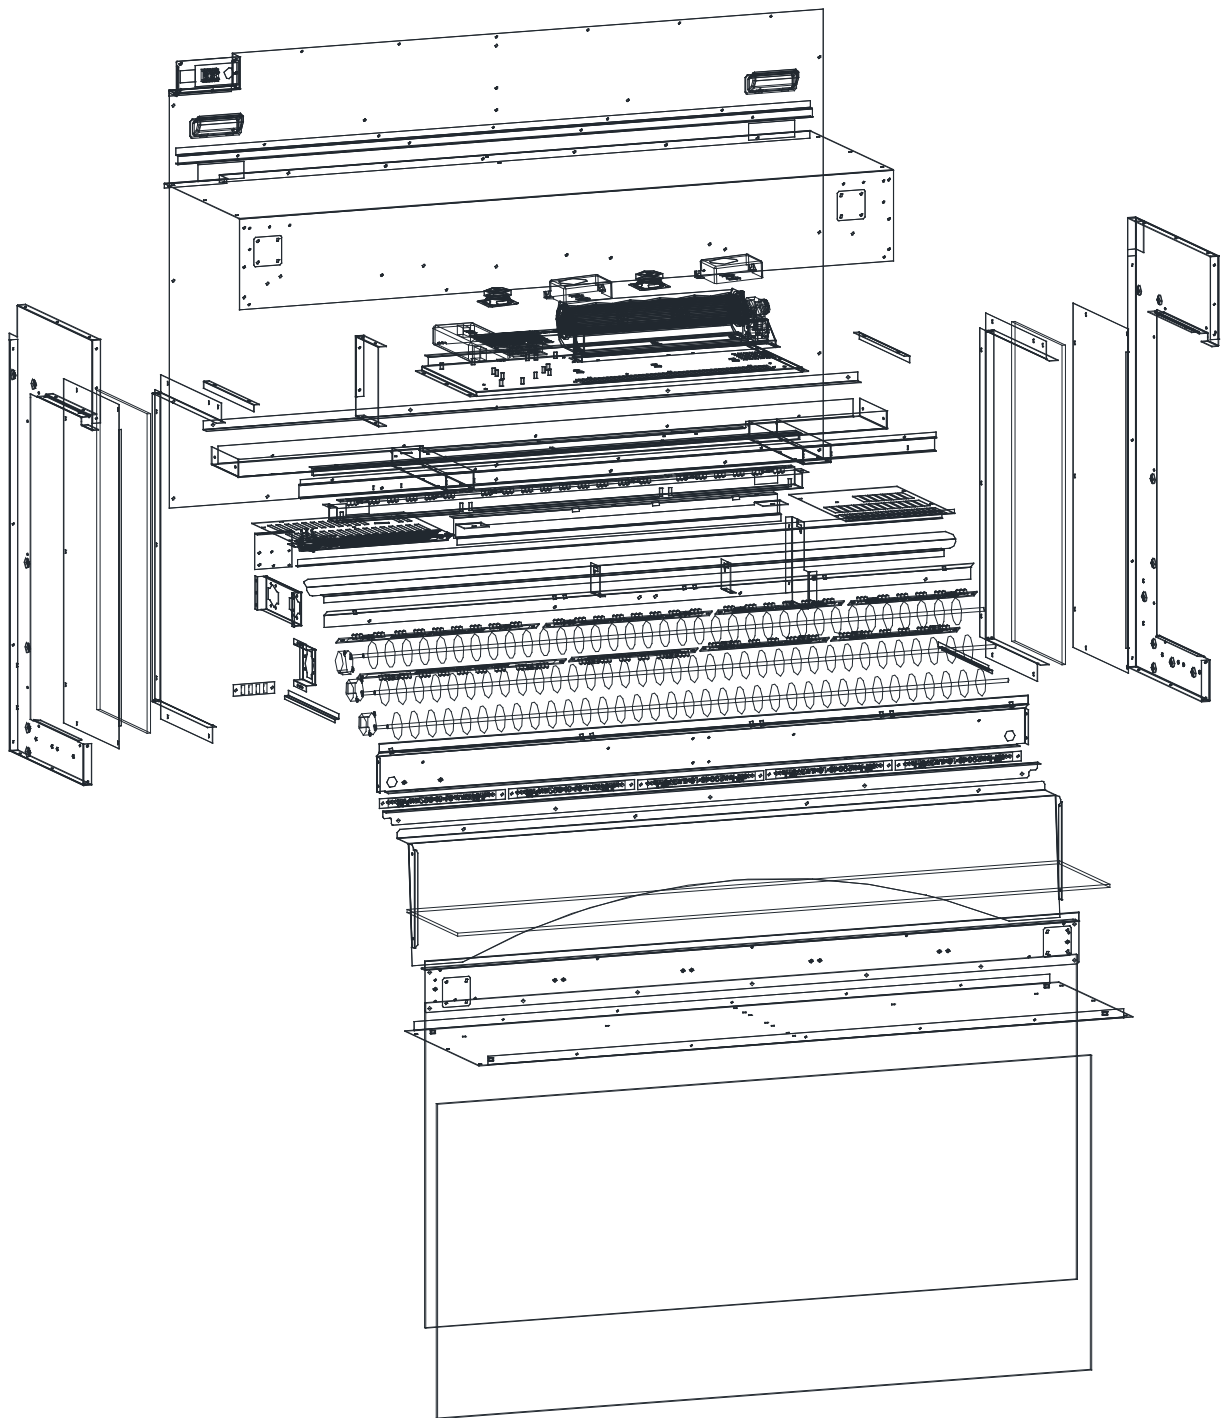

WIRING DIAGRAM

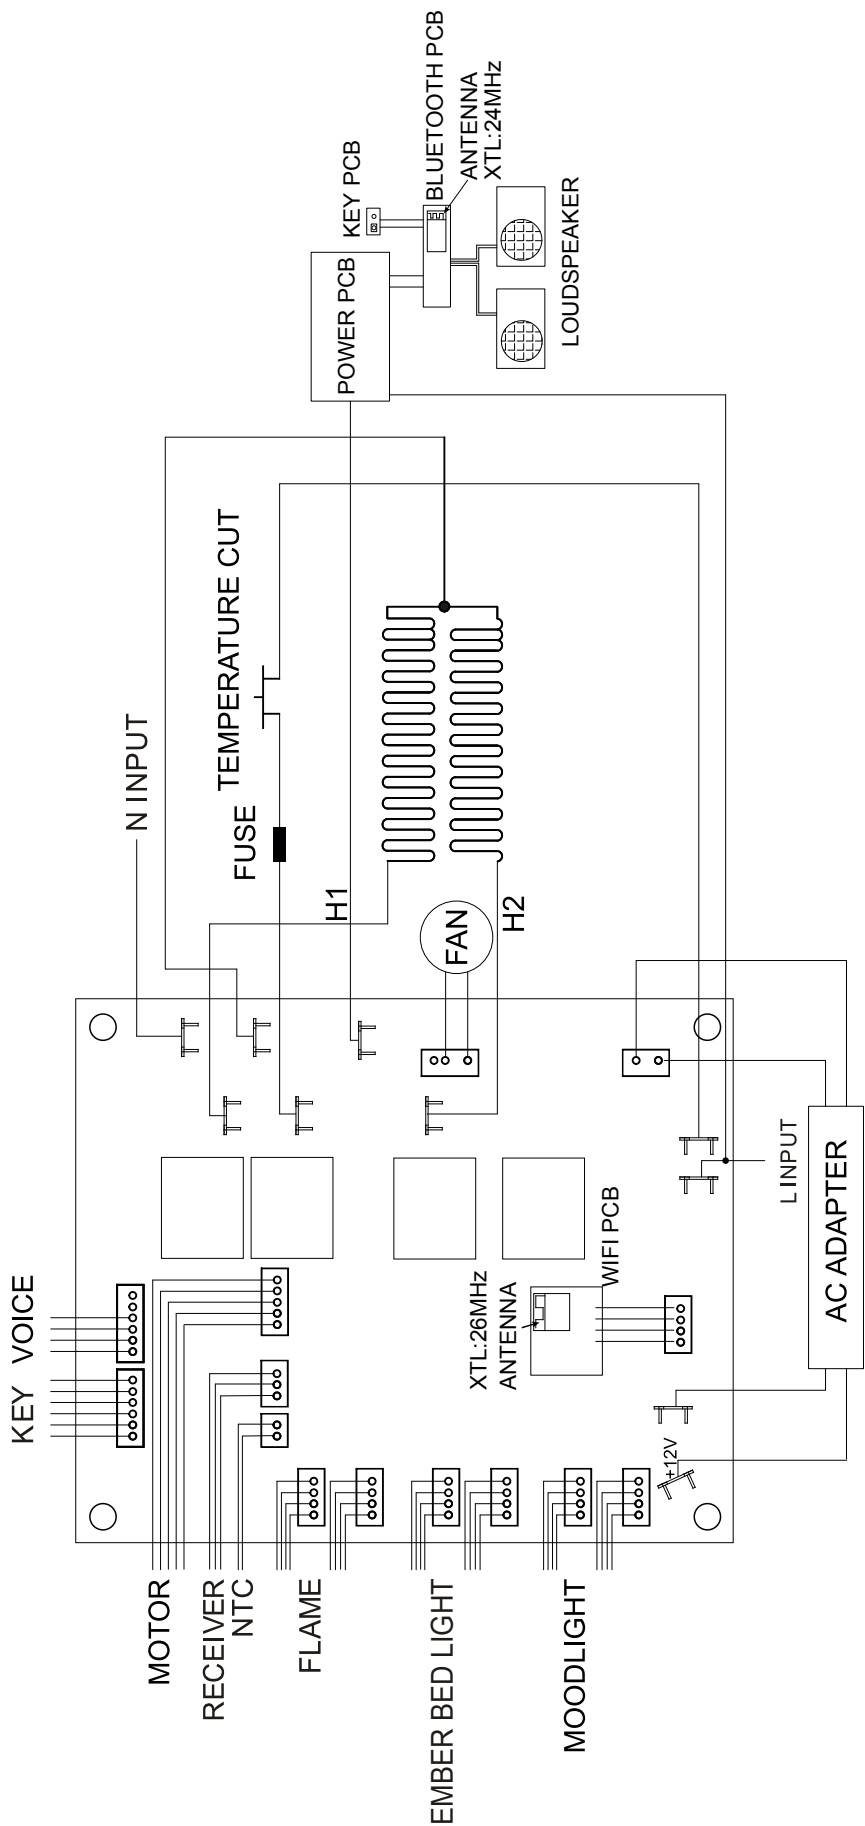



ORDER INFORMATION

Page: 1 of 1 • Package: 1 of 1 • Order Date: 03/11/2024
Order Number: 3605039847
P.O. Number: CS532329987
Shipped Via: Wayfair Delivery Network

Good style. Great space.
This piece is happy to be home.

Snap a pic and tag @wayfair with #wayfairathome
for a chance to be featured on Instagram.

Returns are easy at [wayfair.com/returns](https://www.wayfair.com/returns) • For help or questions visit [wayfair.com/help](https://www.wayfair.com/help)

ITEM #	QTY	DESCRIPTION
BI-50-XTRASLIM	1	Amantii Extra Slim Outdoor Built-In Only Electric Fireplace With Black Steel Surround - 19.88" H x 49.13" W x 4" D

Joss&Main

BIRCH  LANE

ALLMODERN

ELECTRIC FIREPLACE WARRANTY

FOR PRODUCTS MANUFACTURED AFTER JANUARY 1, 2016



Amantii Imports Corp. ("Amantii") warrants that your newly purchased Amantii electric fireplace is free from manufacturing and material defects for a period of two (2) years from the date of the first purchase, subject to the conditions and limitations contained below.

WARRANTY APPLICATION & EXCLUSIONS

This limited warranty applies to your newly purchased Amantii electric fireplace. The warranty is valid for purchases made in any province of Canada, any of the 50 states of the United States of America (including the District of Columbia), as well as in Australia and any country in Europe. Coverage under this limited warranty is available only to the original purchaser of the product and is non-transferable.

REPLACEMENT PARTS

Replacement parts for a unit out of warranty will have to be purchased and the purchaser is also responsible for the cost of shipping. For parts that are under warranty, there is no charge for parts or shipping. Parts will be shipped via standard mail service or added to future orders if timely. The Amantii warranty does not cover labor charges. The Amantii Warranty Form must be completed and returned.

PRODUCTS EXCLUDED FROM THIS LIMITED WARRANTY

LED lights are not covered by this limited warranty and are the sole responsibility of the owner/purchaser.

WARRANTY COVERAGE AND TERM

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such product to be free from defects in material and workmanship for a period of two(2) years from the date of purchase of such product.

The limited two (2) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

Damage to trim kits caused by standing water is not covered under warranty. If such a situation arises, please contact our support line for assistance.

Any warranty part required will be freight collect.

WARRANTY COVERAGE AND TERM - BESPOKE SERIES

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such products to be free from defects in material and workmanship for a period of five (5) years from the date of the first purchase of such products.

The limited five (5) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

WARRANTY COVERAGE AND TERM - SIGNATURE SERIES

The warranty for the Signature Series includes a 2-year warranty provided by Dimplex for the Opti-myst, and the Amantii electric fireplace unit is covered by Amantii Electric Fireplace which is under 2 years warranty period.

LIMITATIONS TO COVERAGE UNDER LIMITED WARRANTY

This limited warranty does not apply to products that have been repaired, except by Amantii or its authorized service representatives, or otherwise altered. This limited warranty further does not apply to defects resulting from misuse, abuse, accident, neglect, incorrect installation, improper maintenance or handling, or operation with an incorrect power source. Products made by other manufacturers, sold with the product or thereafter, are not covered by this limited warranty. The use of unauthorized components will render this warranty null and void.

PANORAMA OUTDOOR UNITS

All Panorama units that are installed outdoors or in moisture intense conditions must use the stainless steel cover. Proof of purchase of the cover is required for any warranty claims.

SERVICE UNDER LIMITED WARRANTY

Defects must be brought to the attention of Amantii Technical Support by contacting Amantii at (1.877.850.9458), or at 502-1027 Davie Street, Vancouver, BC V6E 4L2. Please have your proof of purchase, catalogue/model and serial numbers available when calling; any and all service under the limited warranty requires a proof of purchase of the product.

DEFECTS

Should a product or part covered by this limited warranty be proven to be defective, in material or workmanship, and during the two (2) year limited warranty period, Amantii will replace such defective product or part without charge. If Amantii is unable to replace such product, or if replacement is not commercially practicable or cannot be timely done, in its sole discretion Amantii may, in lieu of replacement, choose to refund the purchase price for such product or part.

ELECTRIC FIREPLACE WARRANTY

FOR PRODUCTS MANUFACTURED AFTER JANUARY 1, 2016

APPLICATION OF PROVINCIAL AND STATE LAW

This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sale of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

GENERAL
Amantii reserves the right to make changes at any time without notice, in design, material, specifications, prices and the right to discontinue styles and products.

GLASS
This limited warranty does not apply to the following glass products:

Model Type	Tray Glass	Front Glass	Back Glass
Symmetry / Panorama	✓	✓	✓
Traditional (TRD)	✓	✓	✓
Tru View	✓	✓	✓
Freestand / Inserts	✓	✓	
WM - Wall Mount	✓		

EXCLUSION OF BATTERIES
Ocean carriers have set new rules designed to protect the safety of shipments while in transit. This new rule disallows the inclusion of lithium/alkaline batteries, as a result we will no longer be including batteries with the fireplace remote.

REPLACEMENT MOTORS
With the reliability of the components used in the construction of our electric fireplaces, a complimentary replacement motor will no longer be included inside the carton containing the fireplace.